

## Fuse Accessory Selection Guide

Fuse	Size	PC Board Fuse Clip (Qty. 2)	PC Board Mount Holder	Panel Mount Holder	In-Line Fuse Holder	Fuseblock
ABC	1/4" x 1-1/4"	1A1907	HBH-I / HBV-I	HTB / HKP	HRK / HHB / HFA	S-8000
AGA	1/4" x 5/8"	1A1907	-	-	-	-
AGC	1/4" x 1-1/4"	1A1907	HBH-I / HBV-I	HTB / HKP	HRK / HHB / HFA	S-8000
AGU	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
AGW	1/4" x 7/8"	1A1907	-	-	HRK / HHB / HFA	-
AGX	1/4" x 1"	1A1907	-	HJL	HRK / HHB / HFA	3828-1
ATC	-	1A5600	-	-	HHD	-
ATM	-	1A5778	-	-	HHM	-
BAF	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
BAN	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
BBS	13/32" x 1-3/8"	1A3400	-	HPS-L	HEH	BM6031PQ
C519	5mm x 15mm	1A3399	-	-	HHT	-
C520	5mm x 15mm	1A3399	-	-	HHT	-
DCM	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
FNA	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
FNM	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
FNQ	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
FNQ-R	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BC6031PQ
FWH	1/4" x 1-1/4"	1A1907	-	-	-	-
GBA	1/4" x 1-1/4"	1A1907	-	HLD	HRK / HHB / HFA	S-8000
GBB	1/4" x 1-1/4"	1A1907	HBH-I / HBV-I	HTB / HKP	HRK / HHB / HFA	S-8000
GLD	1/4" x 1-1/4"	1A1907	-	HLD	HRK / HHB / HFA	S-8000
GMA	5mm x 20mm	1A3399	HTC-45M / -50M	HTB / HTC	HHT	HTC-15M
GMC	5mm x 20mm	1A3399	HTC-45M / -50M	HTB / HTC	HHT	HTC-15M
GMD	5mm x 20mm	1A3399	HTC-45M / -50M	HTB / HTC	HHT	HTC-15M
KLM	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
KTK	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
KTK-R	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BC6031PQ
KTQ	13/32" x 1-3/8"	1A3400	-	HPS-L	HEH	BM6031PQ
LP-CC	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BC6031PQ
MDA	1/4" x 1-1/4"	1A1907	HBH-I / HBV-I	HTB / HKP	HRK / HHB / HFA	S-8000
MDL	1/4" x 1-1/4"	1A1907	HBH-I / HBV-I	HTB / HKP	HRK / HHB / HFA	S-8000
MDQ	1/4" x 1-1/4"	1A1907	HBH-I / HBV-I	HTB / HKP	HRK / HHB / HFA	S-8000
MIC	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
MIN	13/32" x 1-1/2"	1A3400	-	HPG	HEB	BM6031PQ
PCB	-	-	PCS	-	-	-
PCD	-	-	PCS	-	-	-
S500 / GDB	5mm x 20mm	1A3399	HTC-45M / -50M	HTB / HTC	HHT	HTC-15M
S501 / GDA	5mm x 20mm	1A3399	HTC-45M / -50M	HTB / HTC	HHT	HTC-15M
S505	5mm x 20mm	1A3399	HTC-45M / -50M	HTB / HTC	HHT	HTC-15M
S506 / GDC	5mm x 20mm	1A3399	HTC-45M / -50M	HTB / HTC	HHT	HTC-15M
SC-1 to 15	13/32" x 1.31"	1A3400	-	HPS-EE	HEG	BG3011PQ
SC-20	13/32" x 1.41"	1A3400	-	HPS-JJ	HEH	BG3021PQ
SC-25 to 30	13/32" x 1.63"	1A3400	-	HPS-FF	HEC	BG3031PQ
SC-35 to 60	13/32" x 2-1/4"	1A3400	-	-	HEJ	G30060-1CR
SR-5	-	-	PCS	-	-	-
SR-5F	-	-	PCS	-	-	-
SS-5	-	-	PCS	-	-	-
SS-5F	-	-	PCS	-	-	-
TDC10	1/4" x 1-1/4"	1A1907	HTC-45M / -50M	HTB / HKP	HRK / HHB / HFA	S-8000
TDC11	1/4" x 1-1/4"	1A1907	HTC-45M / -50M	HTB / HKP	HRK / HHB / HFA	S-8000
TDC180	1/4" x 1"	1A1907	-	HJL	HRK / HHB / HFA	3828-1

# Quick Cross Reference

Littelfuse	Cooper Bussmann	Description
213	S506	5mm Fuses
215	S505	5mm Fuses
216	S501	5mm Fuses
217	S500	5mm Fuses
218	S506	5mm Fuses
220	C517	5mm Fuses
224	C518	5mm Fuses
225	C520	5mm Fuses
229	C519	5mm Fuses
230	C515	5mm Fuses
233	GMC	5mm Fuses
235	GMA	5mm Fuses
239	GMD	5mm Fuses
251	MCRW	Subminiature Fuses
257 / ATO	ATC	Blade Fuses
297 / MINI	ATM	Blade Fuses
299 / MAXI	MAX	Blade Fuses
312	AGC	1/4"(6x32mm) Fuses
313	MDL	1/4"(6x32mm) Fuses
314	ABC	1/4"(6x32mm) Fuses
315	MDL-V	1/4"(6x32mm) Fuses
318	AGC-V	1/4"(6x32mm) Fuses
322	GBB	1/4"(6x32mm) Fuses
324	ABC-V	1/4"(6x32mm) Fuses

Littelfuse	Cooper Bussmann	Description
325	MDA-V	1/4"(6x32mm) Fuses
326	MDA	1/4"(6x32mm) Fuses
372	SR-5	Micro Fuses
373	SR-5F	Micro Fuses
382	SR-5H	Micro Fuses
392	SS-5	Micro Fuses
395	SS-5F	Micro Fuses
433	3216FF-R	Chip Fuses
434	0603FA-R	Chip Fuses
448	6125FF-R	Brick Fuses
451	6125FF-R	Brick Fuses
452	6125TD-R	Brick Fuses
453	6125FF-R	Brick Fuses
454	6125TD-R	Brick Fuses
459	6125FF-R	Brick Fuses
460	6125TD-R	Brick Fuses
461	TCP-R	Brick Fuses
464	1025FA-R	SMD Fuses
465	1025TD-R	SMD Fuses
466	3216FF-R	Chip Fuses
467	0603FA-R	Chip Fuses
468	3216TD-R	Chip Fuses
473	MCRS	Subminiature Fuses
PGB1010603	0603ESDA-TR1	ESD Suppressors

Our mission is to be the first choice for target customers seeking application specific power management and protection solutions in the Digital Home & Office and Mobile Electronics world.



©2007 Cooper Bussmann • Boca Raton, FL 33487  
561-998-4100 • www.cooperbussmann.com

Accessory Guide and Quick Cross 01-07

